

H6001



EMOS Pet Care pet feeder 4l PET-101



Table of Contents

Safety instructions.....	2
Contents of the package	4
Technical Specifications	5
Description of the device	6
Installation and assembly.....	8
Controls and functions	10
Equipment maintenance.....	12

Safety instructions

Before installing or using the product, first read the instructions in the instructions completely and make sure you understand them. Keep this document and the packaging for future reference.

WARNING

Security risk:

- Do not disassemble, open or break the batteries.
- Do not use the feeder on animals that cannot reach the tray or on animals with any physical disabilities.
- Do not use the feeder outdoors.
- Do not use wet, canned or moist food.
- Check the batteries regularly. Always replace the batteries with new ones before leaving for an extended period of time.
- Do not lift the feeder by the lid, feed tray or bowl. Lift and carry the base with both hands, keeping the feeder upright.
- Use only suitable dry food with a pellet diameter of 2-15 mm. Larger pellets can get stuck in the feed hole.
- Do not insert your fingers into the feed hole or allow your fingers to touch the rotor.

Electrical risk:

- Improper installation and/or use may cause electric shock or fire.
- Read the instructions before installation and take into account the specific characteristics of the space and location where the product will be installed.
- Do not open, disassemble, modify or alter the device unless specifically instructed to do so in the instructions.
- Any unauthorized opening or repair will result in the loss of all liability, rights and warranties.
- Always use only the original power cord.
- The product can only be supplied with a voltage that corresponds to the information on the product label.
- Only a qualified technician may service this product to reduce the risk of electric shock.
- Disconnect the product from the power supply before cleaning.
- The product must not be used by persons (including children) whose physical, sensory or mental abilities or lack of experience and knowledge prevent them from using the product safely without supervision or instruction.
- Cleaning and user maintenance must not be carried out by unsupervised children.
- Do not immerse the product in water or other liquids.

Risk of fire:

- Do not use the product if any part is damaged or defective. Replace the damaged or defective product immediately.

Risk of suffocation:

- Do not let children play with the packaging material. Keep the packaging material out of the reach of children.

Risk of chemical burns:

- Do not expose cells or batteries to mechanical stress.

NOTICE

Risk of tripping:

- The power cord and the product must always be positioned so that it does not interfere with normal walking .

NOTICE

Risk of damage to the product:

- Use the product only as described in this document.
- Prevent the product from falling and protect it from impact.
- Do not use aggressive chemical cleaning agents when cleaning the product.
- Supervise children so that they do not play with the product.

EMOS spol. s r.o. declares that the product H6001 complies with the essential requirements and other relevant provisions of the directives. The equipment can be operated freely in the EU.

The Declaration of Conformity can be found on the website <http://www.emos.eu/download>.

The equipment can be operated on the basis of general authorisation No. VO-R/10/07.2021-8 as .

Contents of the package

Feeder

 
Moisture absorber (Silica gel) USB
cable

Power adapter

Stainless steel bowl

Bowl holder



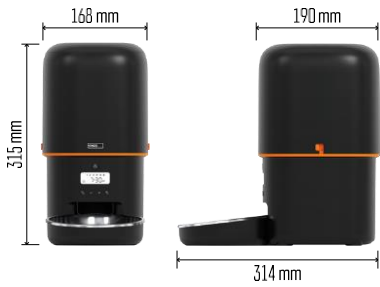

Technical Specifications

Power supply: 5 V/1 A max. 5 W / 3× 1.5 V

Batteries (type D)

Feed capacity: 4 l Pellet

diameter: 2-15 mm

Dimensions: 315 × 314 × 168 mm

Feeding method: manual, timed

Maximum number of automatic feedings per : 6

Maximum number of servings per feeding: 16

Weight per serving: 5-6 g Time format:

12 hours (AM/PM)

Description of the device

Description of the feeder





- 1 - Top cover of the pellet container
- 2 - Container for granules
- 3 - Granule feeder and granule shortage sensor
- 4 - Lock for fixing the container
- 5 - Button for manual feeding
- 6 - Lock/Exit button
- 7 - Display
- 8 - Confirmation/Setup button
- 9 - Up/Down button
- 10 - Dispensing opening
- 11 - Stainless steel bowl
- 12 - Bowl holder
- 13 - Space for batteries
- 14 - Power port
- 15 - Space for moisture absorber

Display description



- 1 - Serving number
- 2 - Status LED (described in the table below)
- 3 - Lock icon
- 4 - Low battery indicator
- 5 - Blocked granule indicator
- 6 - AM/PM time indication (morning/afternoon)
- 7 - Time / number of servings

LED color and indicator displayed	Description
The red light flashes and the  icon appears on the display	The batteries in the feeder are dead and need to be replaced.
The red light flashes and the  icon appears on the display	The feeder's stuck. Empty and check the pellet container. Remove any stuck feed in the feeder or in the pellet dispensing hole.
White light shines	Normal state



Description of the control panel

- 1 - Button for manual feeding
- 2 - LED status light
- 3 - Lock/Exit button
- 4 - Up/Down button
- 5 - Confirmation/Setup button

Button	Functions
Lock/Exit button	<p>In the locked state, press and hold for 3 seconds to unlock.</p> <p>In the unlocked state, press and hold for 3 seconds to lock.</p> <p>In the unlocked state, one press to return to the last step.</p>
Up/Down button	<p>In the unlocked state, press the button to select time, portion, AM/PM.</p> <p>In the locked state, when pressed, the information about the setting of individual portions.</p>
Confirmation/Setup button	<p>In the unlocked state, press and hold for 3 seconds to start setting the current time and feeding schedule.</p> <p>After setting the plan, press again and hold for 3 seconds to exit. In the unlocked state, press once to confirm settings and enter the next step.</p>
Button for manual feeding	<p>Press once to dispense a single portion or press several times in succession to dispense multiple portions. Information about the number of servings will be shown on the display.</p>

Note: To reset the feeder to factory settings, in the unlocked state, press and hold the Lock/Exit button and the Confirm/Set button simultaneously for 3 seconds until all icons on the screen light up.

Installation and assembly

Place the pellet container on top of the base so that the lock slides into the appropriate holes. Then secure the container with the given lock for a correct and secure fit.



Press both buttons on the top cover of the container at the same time to release it. There is also a compartment for the moisture absorber on the underside of this cover.



Fill the container with pellets



Place the container cover back on and make that the cover fits correctly and firmly into the handles.



Attach the pellet bowl



Controls and functions

Time settings

Note: The feeder can only work properly if the time on the device matches the current time.



In the unlocked state, press and hold the Confirm/Set button for about 3 seconds until the clock digits start flashing. Press the Up/Down button to set the hour and press the Confirm/Set button again to confirm. The setting will automatically move to minute digits.



The minute digits should flash, and again be set with the Up/Down button. Set the correct value and press the Confirm/Set button.



The AM/PM icon should now be flashing. Select whether the time should be set to AM or PM, and press the Confirm/Setup/Setup button.

Time format conversion from 24-hour to 12-hour

For technical reasons, the feeder only supports the 12-hour time format. Below you will find a brief tutorial on how to convert the time from 24-hour format to 12-hour format.

12-hour time format:

 
 
- Morning (AM): the time from 00:00 (midnight) to 11:59 is referred to as "AM".
 - For example: 1:00 AM is 1am, 11:00 AM is 11am.
- Afternoon (PM): the time from 12:00 (noon) to 11:59 is referred to as "PM".
 - For example: 1:00 PM is 1 pm, 11:00 PM is 11 pm.

How to convert from 24-hour format to 12-hour format:

- From 00:00 to 11:59: The times remain the same, but "AM" is added.
 - Example: 8:30 AM is 8:30 AM.
- From 12:00 to 12:59: The time remains the same, but "PM" is added.
 - Example: 12:30 PM is 12:30 PM.
- From 13:00 to 23:59: Subtract 12 hours and add "PM".
 - Example: 3:45 PM is 3:45 PM.

Examples:

14:00 (24-hour format) = 2:00 PM (12-hour format) 07:15 (24-hour format) = 7:15 AM (12-hour format) 00:00 (24-hour format) = 12:00 AM (12-hour format)

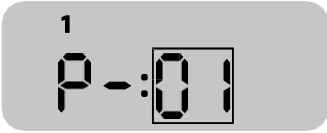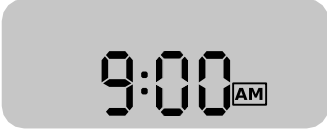

Feeding plan settings

Feeding time setting

Once you have set the current time, you can immediately start setting up your meal plan. You can set a total of 6 meals.

The meal number 1 and the clock digits will flash simultaneously. Select the feeding time in the same way as in the previous step and press the Confirm/Set button.

Portion settings

After setting the feeding time, you can directly set the number of portions in the meal.

The number of portions will flash and you can select the desired quantity by pressing the Up/Down button and pressing the Confirm/Set button.

The settings for feed number one are now set and you can repeat the same procedure for feeds 2-6.

Equipment maintenance

- Always disconnect the unit from the power supply before cleaning.
- Do not wash or soak the feeder base in water as the base contains electronic components.
- To protect the granules from moisture, wipe all parts dry or air dry after cleaning.
- If you use a cleaning agent to clean, rinse it thoroughly to make the device safe for animals.
- To keep the feed fresh, change the once a month.